Franklin®

EST-7117

Linguist

17 Language Speaking Global Translator

User's Guide

www.franklin.com

www.franklin.com/eu

License Agreement (US only) 3
Battery Precautions 5
Product Care 7
Charging the Battery 8
Resetting Your Product 11
Understanding Your Device 12
Setting the Message Language 15
Changing the Source and
Target Languages 17
Browsing in the Device 18
Using the Touch Screen 20
Showing the Help Messages 21
Adjusting Sound Volume 22
Changing Font Size 23
Using USB Port 24
Connecting to Headphones 25
Input Methods 26
Using the Search Feature 28
Using the Translator 30
Using the Visual Dictionary 33
Translating Phrases 35
Using My Word List 37
Using the Personal Dictionary 40
My Phrases 46
History 48
Using the Calendar 49

Using the Calculator.....51
Using the Clock/Alarm 53
Using the Memo.....56
Using the Voice Memo 59
Using the Metric Converter.....60
Using the Currency Converter 62
Using the Countdown Timer.....65
Changing the Settings 66
Connecting Your Device 67
Copying Files to Your Device 68
About Your Device Folders.....70
Backing Up Your Data 71
Restoring Your Data 72
Specifications 73
Recycling and Disposal 75
FCC Notice (US only) 76
Disclaimer of Warranties 78
Limited Warranty (U.S. only) 79
Limited Warranty (EU and Switzerland) 83
Limited Warranty (outside U.S., EU and Switzerland) 84
Limited Warranty (Australia) 85

Please read the following safety warnings and precautions before using your device.
Note: If this device is to be used by young children, this User's Guide should be read to them by an adult and their use of the device should be monitored. Failure to do so may cause injury.

License Agreement (US only)

READ THIS LICENSE AGREEMENT BEFORE USING THE ELECTRONIC REFERENCE. YOUR USAGE OF THE ELECTRONIC REFERENCE DEEMS THAT YOU ACCEPT ALL TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE ELECTRONIC REFERENCE AND YOUR PURCHASE PRICE WILL BE REFUNDED. ELECTRONIC REFERENCE means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

Limited Use License:

All rights in the ELECTRONIC REFERENCE remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use this ELECTRONIC REFERENCE. You may not make any copies of the ELECTRONIC REFERENCE or of the data stored therein at the time of purchase, whether in electronic or print format. Such copying

would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the ELECTRONIC REFERENCE. You may not export or re-export, directly or indirectly, the ELECTRONIC REFERENCE without compliance with appropriate governmental regulations. The ELECTRONIC REFERENCE contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated by Franklin. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Battery Precautions

Your device is powered by a rechargeable lithium polymer battery.

- If the device is not used for a long period of time, the battery may lose its charge. Please recharge the battery following the steps described above in order to use your device.
- Rechargeable batteries are only to be charged under adult supervision.
- Use only the supplied chargers to recharge the battery. Improperly charging a battery may damage it or the device.
- Do not use an unauthorized battery. Use only the rechargeable battery that came with your product or that is listed in the user's guide.
- Open the device only to insert or change the battery. All other changes to this device are strictly prohibited and will invalidate the warranty.
- Do not attempt to open the rechargeable battery or battery pack. There are no user serviceable parts inside.
- Should a battery leak, the device may become damaged. Clean the battery compartment immediately, avoiding

contact with your skin.

- Keep batteries out of reach of small children. If swallowed, consult a physician immediately.
- Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Do not dispose as household waste.

Product Care

Your device is designed to be light, compact, and durable. However, it is an electronic device and must be treated carefully. Putting unnecessary pressure on it or striking the device against other objects can cause damage. In order to avoid damage to your device, please:

- Do not drop, crush, bend, or apply excessive force to the device.
- Do not expose your device to moisture, extreme or prolonged heat, cold, humidity, or other adverse conditions. Avoid storing it in damp, humid, or wet places. The device is not waterproof.
- Clean the device by spraying a mild glass cleaner onto a cloth and wiping its surface. Do not spray liquids directly on your device.
- Should the device's display glass break, properly dispose of the product avoiding contact with your skin, and then wash your hands immediately.
- Please keep screen protectors and plastic bags away from babies and children to avoid danger of suffocation.

Charging the Battery

Your device is powered by a rechargeable lithium polymer battery of capacity 600 mAh. When you see the low battery warning, please recharge the battery. Please charge the battery before your first use of the device.

Installing the Battery For the First Time

Follow these instructions to install the battery for the first time. **Note:** Please contact your local Franklin service office to replace the battery at a later time.

1. **Turn your device over.**
2. **Open the battery cover on the back of the unit by pushing in the direction of the arrow.**
3. **Insert the battery by gently connecting the clip to the clip on your device.**

- Make sure the battery fits snugly into the compartment after it is connected.

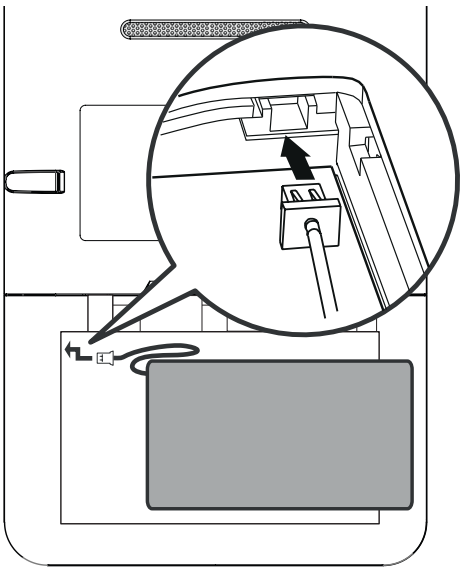

4. **Replace the battery compartment door.**

Charging the Battery with your Computer

Plug the wide end of a USB cable into a USB port on your computer and the smaller end of the USB cable into the USB port on your device. It generally takes a few hours to completely recharge the battery.

Charging the Battery with the AC Adapter

1. **Find the AC adapter and the replaceable plugs included with your device.**

- **Note:** It may be necessary to attach a different component to the adapter. Refer to the diagram below to remove and replace the connector.

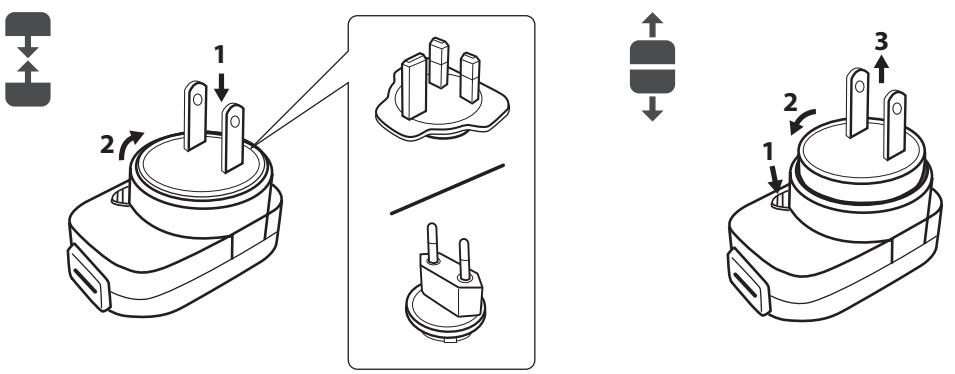

2. **Plug the wide end of a USB cable to the AC adapter and the small end into the USB port on your device.**
3. **Insert the AC adapter to a power outlet.**

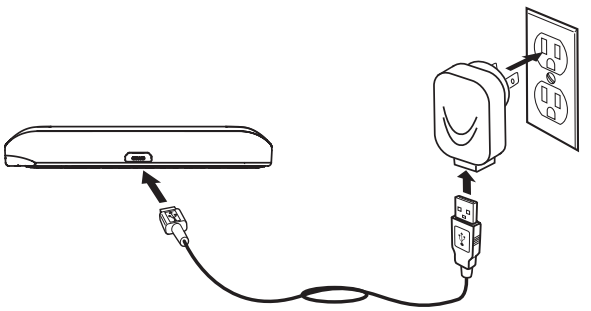

- It generally takes a few hours to completely recharge the battery.

Removing the Battery

In case you need to remove the battery for service or replacement:

1. **Open the battery cover on the back of the unit.**
2. **Remove the battery by unplugging from the clip on the device.**

- You may need the help of a pair of pliers to remove from the clip.

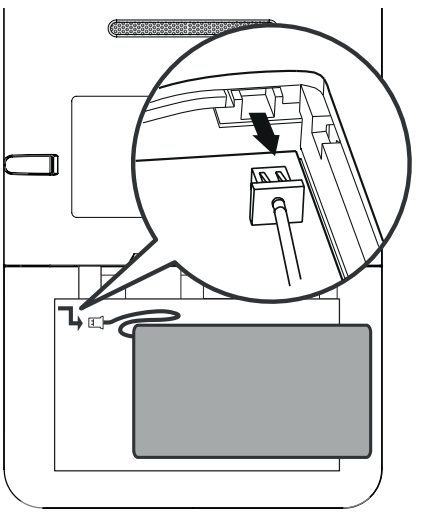

Resetting Your Product

If the keyboard fails to respond, or if the screen performs erratically, perform a system reset by using a paper clip to gently press the reset button on the back of the device. Then press to power on the device again.

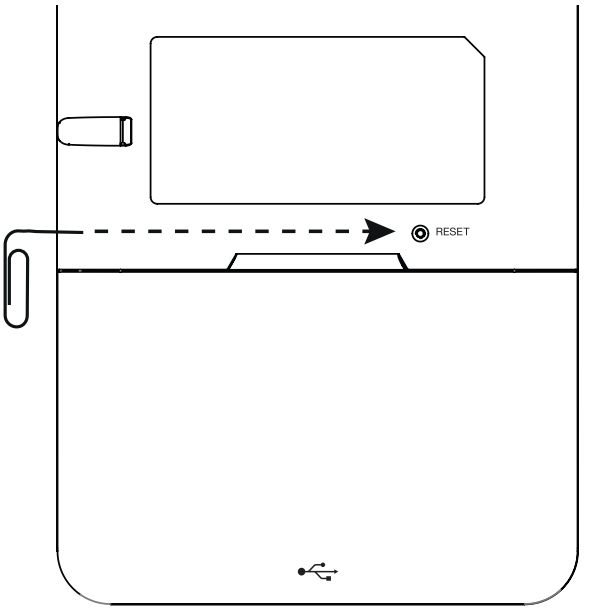

Warning! Pressing the reset button with more than light pressure may permanently disable your product. In addition, resetting the product erases settings.

Understanding Your Device

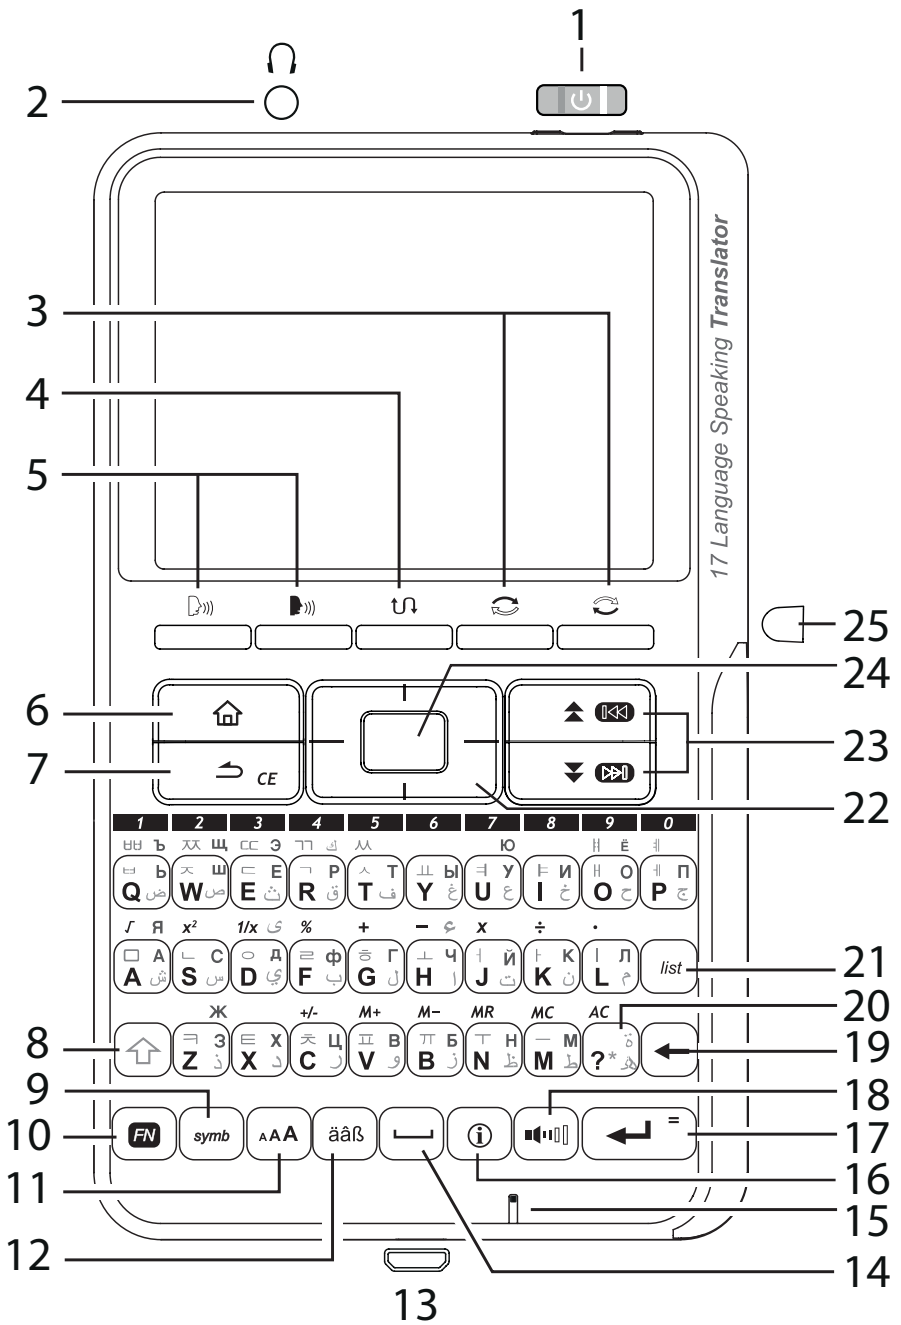

1. On/Off button
2. Headphone jack
3. Change the source and target languages
4. Switches between the source and target

languages
5. Speak the source or target language
6. Goes to the main menu
7. Backs up or clears all entries
8. Shifts letter keys
9. Displays a menu for inputting symbols
10. Performs additional functions when used with other keys
11. Changes the font size
12. Selects accents for characters when typing
13. USB port
14. Enters a space
15. Microphone
16. Shows help messages
17. Enters a word or selects an item
18. Volume adjustment
19. Backs up or erases a letter
20. Types a question mark to stand for a letter in a word
21. Adds words to My Word List or goes to My Word List
22. Moves up (▲), down (▼), left (◀) or right (▶). The arrows at the bottom right of the screen show which direction keys you can press to move around menus or view

more text.

23. Scrolls up or down a screen page
24. Enters a word or selects an item

- This key is referred to as **OK** in this guide.

25. Touch screen stylus

Combination keys

(Hold the first key while pressing the second)

- **FN + 0 ~ 9**

  Inputs numbers

- **FN + ⏮ / ⏭**

  Goes to the previous or next entry in the dictionary or in a list of multiple search results

- **⇧ + ?***

  Types an asterisk (*) to stand for any series of unknown letters or characters in a word.

Setting the Message Language

The first time you use this translator (or following a product reset), you will be prompted to set the message language used for on-screen prompts and menu items.

1. **Press the letter for the language you want.**

- **Note:** You may also use the direction keys to select the language you want.

A = Arabic
B = Farsi
C = Chinese
D = Dutch
E = English
F = French
G = German
H = Hindi
I = Italian
J = Japanese
K = Korean
O = Polish
P = Portuguese
R = Russian
S = Spanish
T = Turkish
V = Vietnamese

2. **Press OK / ↵ to confirm.**

- **Note:** You can change the message language at any time in the “Settings” menu.

Changing the Source and Target Languages

The source language is the language in which you enter a word at the translator or search entry screen. The target language is the language in which you wish to view the translation. The source language is the same as the message language.

To change the source and target languages, do the following.

1. **Press ⇄.**

- The list of source languages is displayed.

2. **Press ▲, ▼, ◄ or ► to select the one you want and then press OK / ↵.**
3. **Press ⇄.**

- The list of target languages is displayed.

4. **Press ▲, ▼, ◄ or ► to select the one you want and then press OK / ↵.**

Note: Press ⇅ to switch the current source and target languages.

Browsing in the Device

Browsing in the Main Menu

Press ⌂ to access the main menu at any screens to quickly take you to different features in your device. Press ▲ / ▼ to select an option you want and then press **OK /** ↵.

Browsing in a List

Press ⏫ / ⏬ to scroll up or down one screen at a time. In a screen, press ▲ / ▼ to highlight an option and press **OK /** ↵ to select the highlighted option.

Browsing in an Entry

- Press ▲ / ▼ to scroll up or down one line at a time. Press ⏫ / ⏬ to scroll up or down one screen at a time.
- Press **FN** + ⏮ / ⏭ to go to the previous or next entry in the dictionary or in a list of multiple search results.

Reverting Back

- At any screen, press ⌂ to go back to the main menu.
- Press ← to cancel the current operation and revert back to the last working prompt, screen or menu.
- Press ⮌ to cancel the current operation and revert back to the last working prompt, screen or menu.

Using the Touch Screen

The screen of the device is touch-sensitive. We recommend using the provided stylus to use the touch screen. The stylus is stored at the back of the device.

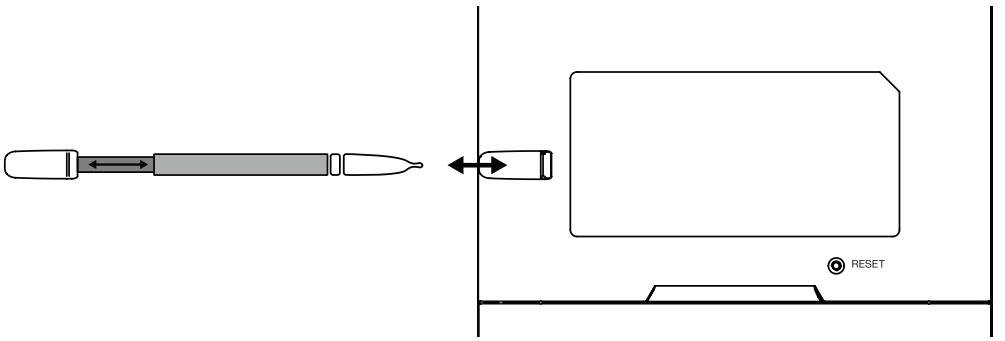

To highlight an item, tap on the item once. To open the item, tap and hold the item until the item is opened.

Note: The instructions in this user's guide are for operations through buttons only though many items and features can be selected and operated on the touch screen.

Important: To avoid damaging the touch screen, do not tap the screen with sharp objects or apply excessive pressure to it.

Showing the Help Messages

You can view a help message at any screen by pressing ⓘ. In a help message, press **FN** + **M** to display an overview of all the help topics. Press ▲ / ▼ to select the topic you want and then press **OK** / ↵. To exit help, press ⮌.

Adjusting Sound Volume

Press to show the volume control menu. Press ◄ / ► to adjust the volume.

Changing Font Size

When viewing an entry, press **AAA** repeatedly to change the font size.

Using USB Port

The USB port is located at the bottom of the device for a micro-USB 1.1 compatible connection. For more information, refer to “Connecting Your Device”.

Connecting to Headphones

The headphone jack is located on the top of the device for 3.5 mm, 35 ohm impedance stereo headphones. **Caution:** Monophonic headphones will not work with this unit.

Input Methods

When entering a word in Arabic, Chinese, Farsi, Hindi, Japanese, Korean, Russian or Vietnamese source language, there are a few differences from the languages with Roman-based alphabets.

- For **Arabic**, type characters according to how they are indicated on your device. **Note:** Some keys contain two Arabic characters. To enter one of these letters, press the letter key and then press **äâß**.
- For **Chinese**, type Roman letters to search for words. Your list of results is displayed using Chinese characters. **Note:** For best results, type the entire word at the entry screen. Do not try to find words by entering them character by character.
- For **Farsi**, **Hindi** and **Vietnamese**, a virtual keyboard will be displayed on the screen. Follow the keyboard maps on the screen to type characters by using the keyboard, or use the stylus to directly type on the virtual keyboard.
- For **Japanese**, type Roman letters. As you type letters, the Japanese characters matching what you type will be displayed

at the entry screen.

- For **Korean**, type characters according to how they are indicated on your device. **Note:** Some keys contain two Korean characters. Press ⇧ and then press the letter key to type the second character.
- For **Russian**, type letters according to your device's keyboard. **Note:** Some keys contain two Cyrillic characters. To enter one of these letters, press the letter and then press **äâß**.

Using the Search Feature

You can use the search feature to search all words and phrases saved in the device.

1. **From the main menu, select “Search”.**

- Refer to “Browsing in the Device” for tips on browsing and making selections.

2. **Type the word for searching.**

- You are not required to type accents or special characters. The Search Feature will retrieve similar matches for you.
- If you are uncertain about how to spell a word, type the portion of the word you do know, and type a question mark (?) in place of each unknown letter. Type an asterisk (*) to stand for any missing portion of a word, including prefixes, suffixes, spaces, symbols, or any number of letters.

3. **Press OK / ↵ for the search results.**

- If more related results are available, press **FN** + **M** to show them. When done, press **FN** + **B** to return to the previous result list.
- Press **FN** + ◄ / ► or **FN** + ▲ / ▼ to

select a category (All, Translator, Visual Dictionary and Phrases) to filter results. Press **OK** / ↵ for the filtered results.

4. **Select an entry from the result list.**

- If pronunciation is available, press / to hear it in the source or target language, respectively.

5. **Type another word to start a new search.**

- Or, press ← to go back to the last screen.
- You may also press ⮌ to return to the search entry screen. Press ⮌ to erase all input for a new search.

Misspelling Words

If you enter a misspelled word, a list of corrections appears. Press ▲ / ▼ to select the word you want and then press **OK** / ↵ to see its entry.

Inflected Form Searching

The device is equipped with a smart system to retrieve results from an inflected word. For example, when you type “ate”, the device will retrieve results from the word “eat”.

Using the Translator

Use the Translator to translate words from a source language to a target language.

1. **From the main menu, select "Translator".**

- Refer to "Browsing in the Device" for tips on browsing and making selections.

2. **Press / to adjust the source and target languages, if necessary.**

- Press to switch the source and target languages.

3. **Type a word.**

- With each letter you type, the resulting list of potential matching entries is refreshed.
- You are not required to type accents or special characters. The Translator will retrieve similar matches for you.
- If you are uncertain about how to spell a word, type the portion of the word you do know, and type a question mark (?) in place of each unknown letter. Type an asterisk (*) to stand for any missing portion of a word, including prefixes, suffixes, spaces, symbols, or any number of letters.

4. **If the letters you typed match an entry in the word list, it is automatically highlighted.**
- Or, select another word entry you see in the word list.
5. **Press OK / ↵ to view the entry.**
- Press **FN** + ⏮ / ⏭ to go to the previous or next entry in a list of multiple search results.
- Press / to hear the entry pronounced in the source or target language, respectively.
6. **Type another word to start a new search.**
- Or, press ← to go back to the last screen.
- You may also press ⮌ to return to the search entry screen. Press ⮌ to erase all input for a new search.

Misspelling Words

If you enter a misspelled word, a list of corrections appears. Press ▲ / ▼ to select the word you want and then press **OK** / ↵ to see its entry.

Inflected Form Searching

The device is equipped with a smart system to retrieve results from an inflected word. For example, when you type “ate”, the device will retrieve results from the word “eat”.

Using the Visual Dictionary

Use the Visual Dictionary to search words and their translations from color images in English, French, German, Italian and Spanish. The images are grouped into categories.

1. **From the main menu, select “Visual Dictionary”.**
2. **Press / to adjust the source and target languages, if necessary.**

- Press to switch the source and target languages.

3. **Select a category and then an entry.**

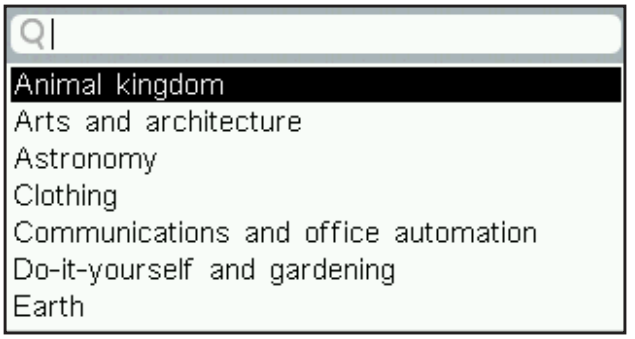

- Or, begin typing a word to search for any entry that contains that word.
- When an entry is selected, a picture is displayed with callouts.
- Press **AAA** to zoom in a picture.

4. **Press the letter of a callout to display the name and translation.**

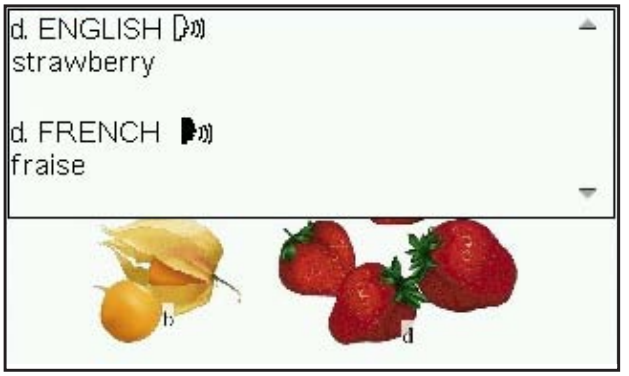

- If necessary, press **AAA** repeatedly to zoom in or out the diagram or change the size of the screen type. In an enlarged diagram, press the direction keys, if necessary, to move around.
- Press and to hear recording of source and target language.

5. **Press ⮌ to close the pop-up window or return to the list of categories.**

Misspelling Words

If you enter a misspelled word, a list of corrections appears. Press ▲ or ▼ to select the word you want and then press **OK** / ↵ to see its entry.

Translating Phrases

The common phrases in this unit are always listed in the current source language.

1. **From the main menu, select "Phrases".**

- Refer to "Browsing in the Device" for tips on browsing and making selections.

2. **Type a word for searching as you do when using the Translator.**

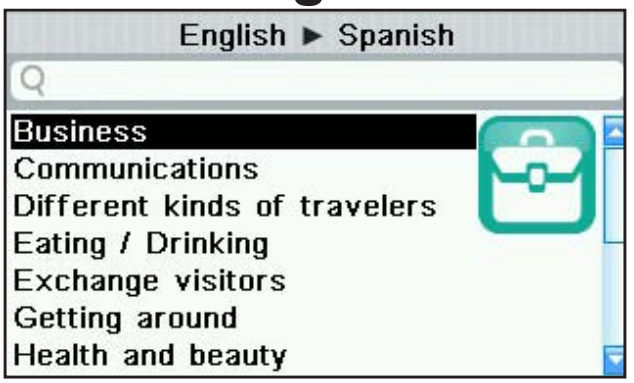

- Or, select a category and then a phrase.

3. **Press OK / ↵ when the entry you want is selected.**

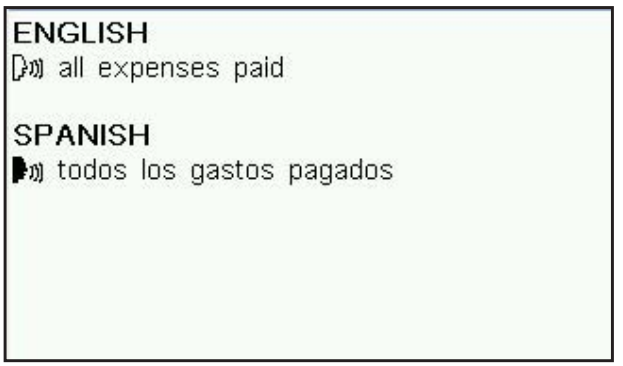

- Press / to hear the entry pronounced in the source or target language, respectively.

4. **Press FN + ⏮ / ⏭ to view the previous or next phrase.**
5. **Press ⮌ / ← to return to the list of phrases or categories.**

Using My Word List

As you explore new words or phrases, save them in My Word List for further study or review. You can save up to 500 words or phrases.

Adding Entries to My Word List

You can add entries from the Translator, Visual Dictionary and Phrases to My Word List.

1. **When you are viewing an entry, press LIST.**

- A pop-up menu appears.

2. **Select an option.**

- **Add**: Adds the current word or phrase to My Word List.
- **Go to My Word List**: Goes directly to My Word List.

Viewing My Word List

1. **From the main menu, select "Favorites".**

- Refer to "Browsing in the Device" for tips on browsing and making selections.

2. **Select "My Word List".**

3. **Type a word for searching an entry in My Word List as you do when using the Translator.**

- To change the input language as you type, press **FN** + **M**, and then select “Input Language” from the pop-up menu for language selection.
- Instead of typing a word, you may select an entry and then press **OK** / ↵.

4. **Press FN + M, and then select the function you want from the pop-up menu. Press OK / ↵ to confirm your choice. The following options are available:**

Add	To add a new entry to My Word List. Type a word to be added and then press **OK**/ ↵. Next, if available, select results from a desired source (i.e., Translator, Dictionary or Phrases). Then, select a desired entry to add it to My Word List. **Note:** To change the input language as you type, press **FN** + **L**.

Delete	To delete the currently selected entry from My Word List.
Clear All	To delete the whole My Word List.
Preview	To preview the currently selected entry.
Select Category	To assign a category to the currently selected entry.
Rename Category	To rename a category name. Select a category to be renamed and then type a new name.
Filter	To view entries in the selected category.
Input Language	To change the current input language.

Using the Personal Dictionary

Create your own dictionaries by saving new words and definitions in the Personal Dictionary. Each dictionary can contain up to 500 entries.

Adding Entries to the Personal Dictionary

1. **From the main menu, select "Favorites".**

- Refer to "Browsing in the Device" for tips on browsing and making selections.

2. **Select "Personal Dictionary".**
3. **Press FN + M and then select "Add" to create a new personal dictionary.**
4. **Create a name for the new personal dictionary and then press OK / ↵.**
5. **Type a word and its definition in the corresponding fields.**

- Press ▲ / ▼ to move between fields.
- To change the input language as you type, press **FN** + **M**, and then select "Input Language" from the pop-up menu

for language selection. **Note:** Each input field allows only one input language.

- To type accents (if permitted), type a letter (e.g., e) and then press **äâß** until the accent you want appears (e.g., é).
- To enter a special character (if permitted), press **symb** to display the menu of symbols. Use the direction keys to move the cursor to the one you want and then press **OK** / ↵.

6. **Press FN + M and then select "Save" to save the new entry.**
7. **To add more entries into the same personal dictionary, press FN + M and then select "Add". Then repeat Steps 5-6.**

- To create a new dictionary, press ⮌ until you see a list of existing personal dictionaries and then repeat Steps 3-6.

Viewing the Personal Dictionary

1. **From the main menu, select "Favorites".**
2. **Select "Personal Dictionary".**
3. **Select a personal dictionary (if you have created more than one).**
4. **Type a word for searching an entry**

in the Personal Dictionary as you do when using the Translator.

- With each letter you type, the resulting list of potential matching entries is refreshed.

5. **If the letters you typed match a word in the list, it is automatically highlighted.**

- Or, select another word you see in the list.

6. **Press OK / ↵ to view the definition.**
7. **Press ⮌ when done and return to the dictionary search entry screen.**

Editing the Personal Dictionary

1. **From the main menu, select "Favorites".**
2. **Select "Personal Dictionary".**
3. **Press FN + M, and then select the function you want from the pop-up menu. Press OK / ↵ to confirm your choice. The following options are available:**

Add	To add a new personal dictonary.

Delete	To delete the currently selected personal dictionary.
Clear All	To delete all personal dictionaries.

4. **Select a personal dictionary (if you have created more than one).**
5. **Press FN + M, and then select the function you want from the pop-up menu. Press OK / ↵ to confirm your choice. The following options are available:**

Add	To add a new entry.
Edit	To edit the currently selected entry.
Delete	To delete the currently selected entry.
Clear All	To delete the current personal dictionary.
Input Language	To change the current input language.

Creating Personal Dictionaries on Your PC

You can also create your personal dictionaries on your PC and then copy them to your device.

1. **On your PC, create your custom dictionaries using a spreadsheet or database application.**

- A template .xls file for creating custom dictionaries is saved in the “PersonalDict” folder of the device. Please copy it to your PC.
- **Important:** Custom dictionaries should be created with the following structure:

language	headword	definition
en	word 1	definition for word 1
fr	word 2	definition for word 2
de	...	...

- **Important:** Each entry must start with a language code (e.g., en = English, fr = French) indicating the language used in an entry. These codes follow the ISO 639-1 standards. Other major language codes can be found in the template file.
- When you save the template file, please

be sure to select “Unicode Text (*.txt)” format and that your columns are tab delimited (that is, separated by tabs).

- The file name you give the file is exactly how it will display on your device.

2. **Copy your .txt formatted files to the “PersonalDict” folder in the device.**

- See “Copying Files to Your Device” for more information.

3. **In the Personal Dictionary, press ▲ or ▼ to select the copied personal dictionary and then press OK / ↵.**

My Phrases

The feature stores the phrases you have saved in the Franklin Bridge software. You can install the software on your computer to look up online translations of phrases and save them for future use. The saved phrases can then be transferred to this device by connecting it to your computer.

The installation program of Franklin Bridge is stored in the device. Please connect the device to your computer and open the folder “Franklin Bridge” to access the program. Refer to the help section of the software for operation instructions. An internet connection is necessary to use the Franklin Bridge software.

To browse the phrases:

1. **From the main menu, select “Favorites”.**
2. **Select “My Phrases”.**
3. **Type a word for searching as you do when using the Translator.**

- Or, select an entry.
- Press **FN** + **M**, and then select the function you want from the pop-up menu.

Press **OK** / ↵ to confirm your choice. The following options are available:

Preview	To preview the currently selected entry.
Select Category	To view entries in the selected category.
Input Language	To change the current input language.

4. **Press OK / ↵ when the entry you want is selected.**

- Press to hear the entry pronounced in the source language.
- Press once to highlight the entry in the first target language. Press / **OK** / ↵ to hear it pronounced. If other target languages are available, press ▲ / ▼ to select the one you want and then press / **OK** / ↵ to hear it pronounced.

5. **Press FN + ⏮ / ⏭ to view the previous or next phrase.**
6. **Press ⮌ to return to the list of phrases.**

History

The unit stores the most recently browsed entries in the Translator, Visual Dictionary and Phrases.

To browse the history:

1. **From the main menu, select "Favorites".**

- Refer to "Browsing in the Device" for tips on browsing and making selections.

2. **Select "History".**
3. **Select a recent entry and then press OK / ↵ to view.**
4. **Press ⮌ when done and return to the entry screen.**

- Press **FN** + **M**, and then select the function you want from the pop-up menu. **Press OK / ↵** to confirm your choice. The following options are available:

Delete	To delete the current entry from History.
Clear All	To delete all entries from History.

Using the Calendar

Use the Calendar to check and set date and time.

1. **From the main menu, select “Organizer”.**

- Refer to “Browsing in the Device” for tips on browsing and making selections.

2. **Select “Calendar”.**
3. **Press FN + M, and then select the function you want from the pop-up menu. Press OK / ↵ to confirm your choice. The following options are available.**

Select Year	To view the calendar of the selected year.
Select Month	To view the calendar of the selected month.

Set Date and Time	To set the local date and time. Use the number keys to input details.
Search Date	To view the calendar of a specific date. Use the number keys to input details.
Today	To go to today.

Using the Calculator

1. **From the main menu, select "Organizer".**

- Refer to "Browsing in the Device" for tips on browsing and making selections.

2. **Select "Calculator".**

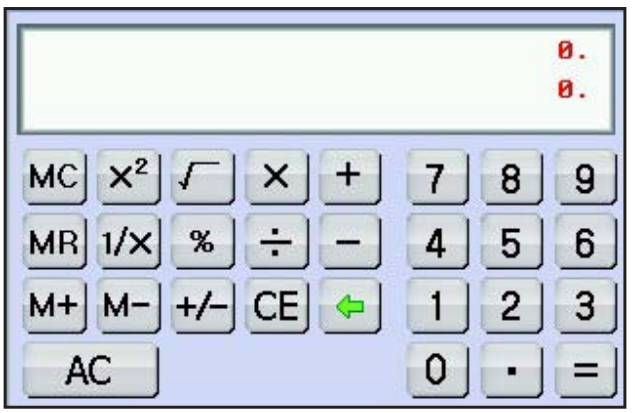

Calculator Keys

0-9	Types numbers.
←	Erases the last typed number.
A(√)	Calculates a square root.
S(x^2)	Square a number.
D(1/x)	Calculates a reciprocal.
F(%)	Calculates a percentage.
G(+)	Adds one value to another.
H(-)	Subtracts one value from another.

J(x)	Multiples two values.
K(÷)	Divides one value by another.
L(.)	Inserts a decimal point.
C(+/-)	Changes the sign of the number on the screen to negative or positive.
V(M+)	Adds the currently displayed value to the number stored in the memory.
B(M-)	Subtracts the currently displayed value from the number stored in memory.
N(MR)	Recalls the number stored in the memory.
M(MC)	Clears the number stored in memory.
?*(AC)	Clears the calculator.
⮌ **(CE)**	Clears the current value but maintains the operation.
↵	Performs an operation.

Using the Clock/Alarm

The clock displays both local and world time in your selected format. You can use the clock to check the time in different cities around the world and set six alarm settings.

1. **From the main menu, select "Organizer".**

- Refer to "Browsing in the Device" for tips on browsing and making selections.

2. **Select "Clock/Alarm".**
3. **Press FN + M, and then select the function you want from the pop-up menu. Press OK / ↵ to confirm your choice. The following options are available.**

Set Date and Time	To set the local date and time. Use the number keys to input details.
Select Local City	To select your local city.
Select World City	To select a world city you want to check the time.

Set Date Format MM\DD\ YYYY (DD\MM\ YYYY)	To change the date format to either MM\DD\YYYY or DD\ MM\YYYY.
Set Time Format to 12H (24H)	To change the time format to either 12 or 24-hour.
Set Alarm Clock	To set the alarm clock. See “Setting the Alarm Clock” for more information.
Set Local City DST On/Off	To set the Daylight Saving Time of the selected local city on or off.
Set World City DST On/Off	To set the Daylight Saving Time of the selected world city on or off.

Setting the Alarm Clock

You can set up to six alarm clock settings. Refer to the above section for accessing the alarm clock setting screen.

1. **Select one of the alarm settings.**
2. **Use the number keys to input the**

alarm activation time in the “Alarm Time” field.

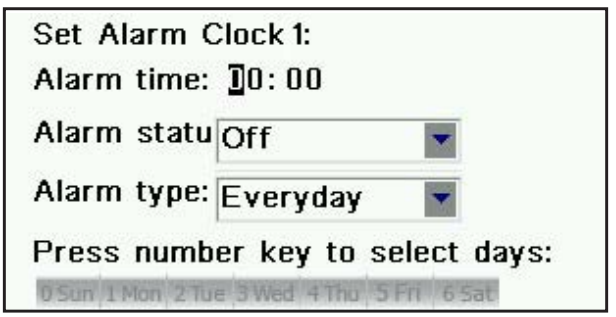
Set Alarm Clock 1:
Alarm time: 10: 00
Alarm statu Off
Alarm type: Everyday
Press number key to select days:
0 Sun 1 Mon 2 Tue 3 Wed 4 Thu 5 Fri 6 Sat

- If the clock is in 12 hour display format, press ⇧ + **P** for “PM” or **A** for “AM”.

3. **Press ▼ to advance to “Alarm Status”. Press ▲ / ▼ to set alarm on or off and then press OK / ↵.**
4. **Press ▼ to advance to “Alarm Type”. Press ▲ / ▼ to set alarm activation pattern as either “Everyday” or “Everyweek” and then press ↵.**

- If Everyweek is selected, press the corresponding number keys to activate the alarm on the selected days of the week (e.g., press **1** for Monday). For de-selection, press the corresponding number keys again.

5. **Press OK / ↵ to save settings.**

Deactivating the Alarm

Press any key on the unit to deactivate the alarm when it sounds.

Using the Memo

Adding Entries

1. **From the main menu, select "Organizer".**
2. **Select "Memo".**
3. **Press FN + M, and then select "Add".**
4. **Enter the appropriate information in the available fields.**

- Press ▼ or ↵ to advance to the next field. Press ▲ to return to the previous field.
- To change the input language as you type, press **FN** + **M**, and then select "Input Language" from the pop-up menu for language selection.
- To type accents (if permitted), type a letter (e.g., e) and then press **äâß** until the accent you want appears (e.g., é).
- To enter a special character (if permitted), press **symb** to display the menu of symbols. Use the direction keys to move the cursor to the one you want and then press **OK** /↵.

5. **When done, press FN + M, and then select “Save”.**

Viewing Entries

1. **From the main menu, select “Organizer”.**
2. **Select “Memo”.**
3. **Type a word for searching an entry.**

- Or, press ▲ or ▼ to select another entry you see in the list.
- To change the input language as you type, press **FN** + **M**, and then select “Input Language” from the pop-up menu for language selection.

4. **Press OK / ↵ to view the selected entry.**
5. **To view the previous or next entry, press FN + ◄ / ►.**

Editing Entries

1. **From the main menu, select “Organizer”.**
2. **Select “Memo”.**
3. **Press FN + M, and then select the function you want from the pop-up menu. Press OK / ↵ to confirm your**

choice. The following options are available.

Add	To add a new entry to the Memo.
Delete	To delete the currently selected entry from the Memo.
Clear All	To clear all memo entries.
Preview	To preview the currently selected entry.
Select Category	To assign a category to the currently selected entry.
Rename Category	To rename the category name.
Filter	To view entries in the selected category.
Input Language	To change the current input language.

- To edit the details of a specific entry, press **FN** + **M** and then select “Edit” while viewing the entry.

Using the Voice Memo

You can use Voice Memo to make voice recordings. The voice memos are stored in .wav format in the “Record” folder of the device.

1. **From the main menu, select “Organizer”.**
2. **Select “Voice Memo”.**
3. **Press R to start a new voice recording.**

- Press **R** to pause the recording and press again to resume.

4. **Press S to stop the recording.**
5. **To play back a recording, select a recording and then press P, OK or ↵.**

- Press **P** to pause or resume the playback.

6. **Press S to stop the playback.**
7. **To rename a selected file, press M.**
8. **To delete a selected file, press ←.**

Using the Metric Converter

1. **From the main menu, select "Organizer".**

- Refer to "Browsing in the Device" for tips on browsing and making selections.

2. **Select "Conversions".**
3. **Select "Metric Converter".**
4. **Press ▼ once and then press ▲ / ▼ to select a conversion unit or category in the three selection menus at the top of the screen. Press OK / ↵ after selections.**

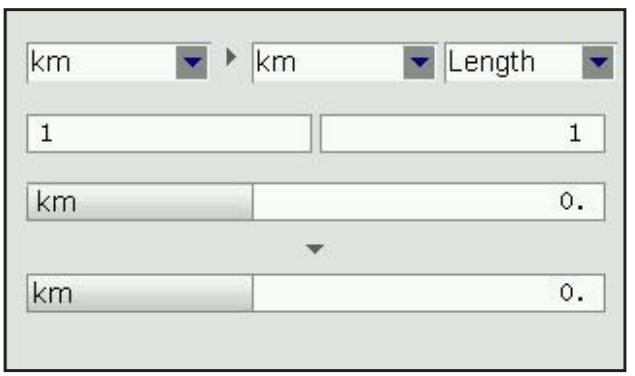

- To move between the selection menus, press ◄ / ►.

5. **Press ↑↓ to select the conversion direction (e.g., kg → lb or lb → kg).**
6. **Enter a number for conversion.**

- To type a decimal, press **L(.)**.

7. **Press OK / ↵ for the result.**

8. **When done, press ?*(AC) to clear all results for a new conversion. Or press ⮌ to clear the current input number only.**

Using the Currency Converter

1. **From the main menu, select "Organizer".**

- Refer to "Browsing in the Device" for tips on browsing and making selections.

2. **Select "Conversions".**
3. **Select "Currency Converter".**
4. **Press ▼ once and then press ▲ / ▼ to select a currency in the two selection menus at the top of the screen, respectively. Press OK / ↵ after selections.**

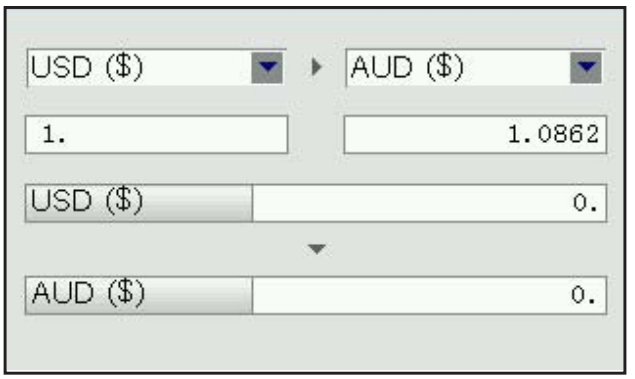

- To move between the selection menus, press ◄ / ►.

5. **Press ↑∩↓ to select the conversion direction (e.g., USD → CAD or CAD → USD).**
6. **Enter a number.**

- To type a decimal, press **L(.)**.

7. **Press OK / ↵ for the result.**
8. **When done, press ?*(AC) to clear all results for a new conversion. Or press ⮌ to clear the current input number only.**

Adjusting Exchange Rates

1. **In the Currency Converter, press FN + E.**
2. **Press ▼ once and then press ▲ / ▼ to select an exchange rate you want to change.**

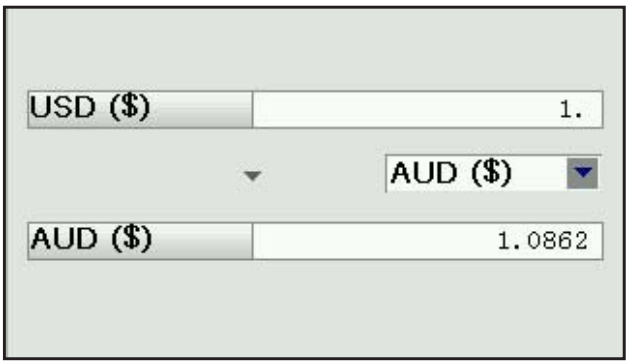

- Each exchange rate is based upon the equivalent to 1 US Dollar. The rate should be in units of the other currency per one unit of the home currency (n other/1 home). For example, to convert between U.S. dollars and euros, enter an exchange rate of 1.3374. This means that 1.3374 euros is the equivalent of 1 U.S.

dollar.

- If you have selected “Other”, press **N** to change it to a currency name you want.

3. **Use the number keys to enter a new exchange rate.**

- To type a decimal, press **L(.)**.

4. **Press OK / ↵ to save.**
5. **Press ⮌ / ← to exit.**

Note: Press **D** to reset all exchange rates to defaults.

Using the Countdown Timer

1. **From the main menu, select "Organizer".**

- Refer to "Browsing in the Device" for tips on browsing and making selections.

2. **Select "Countdown Timer".**
3. **Enter the duration of countdown.**

4. **Press OK / ↵ to start the countdown.**
5. **Press OK / ↵ to pause the countdown.**

- During the pause, press **M** to modify the current duration of countdown. Press ⮌ to reset the timer. Press **OK** / ↵ to continue the countdown.

6. **Press OK / ↵ when the countdown is over.**

Changing the Settings

At any time, you may adjust the settings of your device.

1. **From the main menu, select "Settings".**

- Refer to "Browsing in the Device" for tips on browsing and making selections.

2. **Select a setting and then press OK/↵.**
3. **Press ▲ / ▼ / ◄ / ► to change the selected setting and then press OK/↵.**

- "Auto Shut Off Time" determines how long your product stays on if no key is pressed.
- "Brightness" determines how dark or light the screen is.
- "Message Language" determines the language used to display prompts and other messages in your device.
- "Stylus Calibration" helps improve the accuracy when using the touch screen.
- "Keytone" determines if a tone can be heard when a key is pressed.

Connecting Your Device

Your device has a built-in USB port and can be connected to your desktop or laptop PC with a USB cable.

1. **Turn on your device.**
2. **Connect the wide end of a USB cable to a USB port on your PC and the smaller end to the USB port on your device.**

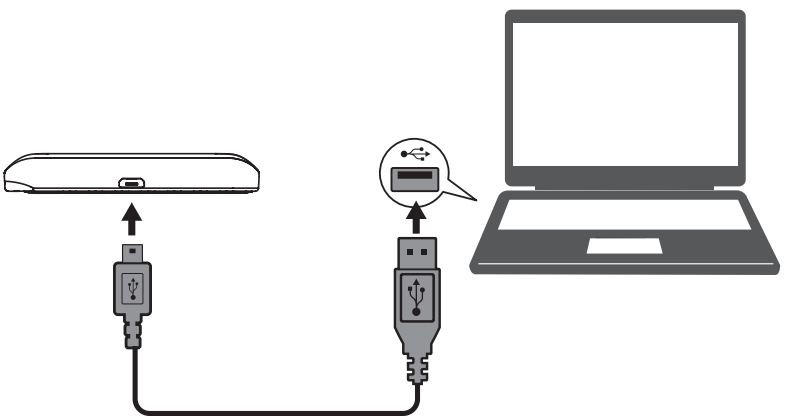

3. **You are asked if you want to connect the device to your PC. Press ◄ / ► to select “Yes” and then press OK / ↵.**

- You see a new “Removable Disk” available for selection on the screen of your PC when the device is properly connected to your PC.

* Compatible with MS Windows and MAC OS X.

Copying Files to Your Device

You can transfer data to the device from your PC or save copies of your data to another location on your PC to backup important information.

1. **Make sure your device is connected to your PC.**

- See “Connecting Your Device” for more information.

2. **On your PC, find the drive labeled “Removable Disk” or “Franklin” and double-click it to open it.**
3. **Right-click the image file you want to copy from your PC to your device and then click “Copy” from the pop-up menu.**
4. **Right-click in the window of the Removable Disk and then click “Paste” from the pop-up menu.**

- If your file is .txt formatted personal dictionary, paste the file in the “PersonalDict” folder of the Removable Disk.

5. **Repeat steps 3-4 to copy additional files to your device.**
6. **Close the open folders.**

7. **Unplug the USB cable from your PC and the device.**

About Your Device Folders

When you access your device on your PC, an assortment of folders are available to you depending on which features you have used.

Remember, “PersonalDict” is always the location to save any .txt formatted personal dictionaries so they appear on your device.

“Record” is always the location to save voice memos. Any other available folders will contain the saved material from other features.

Backing Up Your Data

Because you have access to the folders in which any information you enter is saved, you can backup this important information on your PC. While your device is connected to your PC, right-click any or all of those folders and then click “Copy”. Find a location on your PC where you want to save this information, right-click in that window and then click “Paste” to save the information.

Restoring Your Data

If you accidentally erase or lose information, you can restore any important information you have previously saved to your PC. Connect your device to your PC. Next, find the location on your PC where you saved a backup copy of your information. Right-click on those files or folders and click “Copy”. Click the window containing your device’s folders, right-click and then click “Paste” from the pop-up menu. You can then re-access your previously saved information.

Specifications

Model: EST-7117 *Linguist - 17 Language Speaking Global Translator*

Battery: 1 x rechargeable lithium polymer (3.7V, 600mAh)

Size: 5.2 x 3 x 0.5 in (132 x 78 x 12 mm)

Weight: 3.8 oz (108 g)

© 2013 FRANKLIN ELECTRONIC PUBLISHERS, INC. Burlington, N.J. U.S.A.
All rights reserved.

Franklin Electronic Publishers (Deutschland) GmbH, Kapellenstrasse 13,
85622 Feldkirchen, Germany

“Collins Multilingual Translator” © HarperCollins Publishers 2012

The Visual Dictionary © QA International, 2010.
All rights reserved. www.ikonet.com

www.franklin.com

Imported to the European Community by:
Franklin Electronic Publishers GmbH
Kapellenstr. 13
85622 Feldkirchen
Germany

Recycling and Disposal

Device Disposal

This device should be disposed through your local electronic product recycling system - do not throw in the trash bin.

Packaging Disposal

Please save this User's Guide and all packing materials, as they contain important information. In case of disposal, please refer to your local recycling system.

Battery Disposal

Do not dispose of batteries with normal household waste. Please obey your local regulations when disposing of used batteries. Please visit www.franklin.com/eu to contact Franklin or its distributors to get info for battery disposal and/or replacement. However, shipping and handling expenses might apply.

This unit may change operating modes, lose information stored in memory, or fail to respond due to electrostatic discharge or electrical fast transients. Normal operation of this unit may be re-established by pressing the reset key, by pressing , or by removing and replacing the battery.

FCC Notice (US only)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

– Reorient or relocate the receiving antenna.

– Increase the separation between the equipment and receiver.

– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

– Consult the dealer or an experienced radio/TV technician for help.

Note: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user’s authority to operate the equipment.

Disclaimer of Warranties

Except as specifically provided herein, Franklin makes no warranty of any kind, express or implied, with respect to this product.

Limited Warranty (U.S. only)

LIMITED WARRANTY, DISCLAIMER OF WARRANTIES, AND LIMITED REMEDY

FRANKLIN WARRANTS TO THE ORIGINAL PURCHASER THAT THIS PRODUCT WILL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF THE SALES RECEIPT. THIS LIMITED WARRANTY DOES NOT COVER DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT, OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND THE EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, IS REPAIR OR REPLACEMENT AT THE SOLE OPTION OF FRANKLIN AND THIS REMEDY APPLIES ONLY IN THE CASE IN WHICH FRANKLIN DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THAT THE DEFECT AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS

THE EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

EXCEPT FOR THE LIMITED WARRANTY EXPRESSLY RECITED ABOVE, THIS FRANKLIN PRODUCT IS PROVIDED ON AN “AS IS” BASIS, WITHOUT ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABLE QUALITY, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY OR FOR FRANKLIN AND SPECIFICALLY DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. FRANKLIN SHALL NOT HAVE ANY LIABILITY TO THE PURCHASER OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL,

OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR CORRUPTED DATA, OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF FRANKLIN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR EVEN IF OTHERWISE FORESEEABLE. FRANKLIN IS NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. FRANKLIN'S MAXIMUM AGGREGATE LIABILITY SHALL NOT EXCEED THE AMOUNT PAID FOR THE PRODUCT AS EVIDENCED BY THE SALES RECEIPT. SOME STATES/ JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

Warranty Service: If you think your product is defective, call Franklin's Customer Service Desk, 1-800-266-5626, to request a return merchandise authorization ("RMA") number, before returning the product (transportation charges prepaid) to:

Franklin Electronic Publishers, Inc.

Attn: Service Department

One Franklin Plaza

8 Terri Lane

Burlington, NJ 08016-4907

If you return a Franklin product, please include your name, address, telephone number, a brief description of the defect and a copy of your sales receipt as proof of your original date of purchase. You must also write the RMA prominently on the package if you return the product; otherwise there may be a lengthy delay in the processing of your return. Franklin strongly recommends using a trackable form of deliver to Franklin for your return.

Limited Warranty (EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of two years from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

Limited Warranty (outside U.S., EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time.

Products purchased outside the United States, the European Union and Switzerland that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

Limited Warranty (Australia)

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if goods fail to be of acceptable quality and the failure does not amount to a major failure. This product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of one year from the date of purchase. If you think your product is defective, please contact Franklin to arrange for repair or replacement:

FRANKLIN ELECTRONIC PUBLISHERS (AUST) PTY LTD.
Unit 4, 25 Gibbes Street, Chatswood, NSW 2067, Australia
Contact person: Service Manager
Tel: 1800 882 588
Email: service_au@franklin.com

Charges will be made for all repairs unless valid proof of purchase is provided. Your product will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time. The repair of your goods may result in the loss of any user-generated data. Please ensure that you have made a copy of any data saved on your goods. Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods. This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.